


music . anywhere . everywhere

FUSION User Manual

ΕN

### HELLO!

Please read me carefully before using your FUSION speaker for the first time.

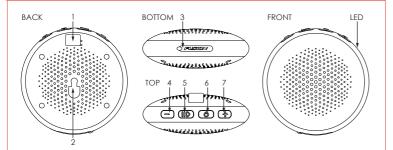

## CONNECT

Connect via billetoom.

Hold on button © until you hear voice prompt "power on" and wait to be prompted "patring", now find the name FUSION on your Bluetooth device menu, select this and wait for the prompt "connected". You are now connected and ready to play music and receive calls.

To switch off press and hold s until prompted "**goodbye**". If you lose power on your Bluetooth device or move out of range your FUSION will say "**disconnected**", once this happens switch off and on and this will reconnect your speaker, or simultaneously press s s once to re-enter pairing mode.



previous song

volume down press & hold

IID

answer call press once

hang up HOLD

redial last call press twice

 
QUICK REFERENCE

ON/pair press & hold 2 seconds

OFF press & hold 5 seconds

volume UP press & hold

voice control siri (IOS) (android) press twice



stereo pair

Once paired to a FUSION speaker to add another switch on No.2 speaker by pressing © ON/OFF then press ⑤, you should then here a beep indicating both your speakers are paired, once you have paired your speakers the next time you switch them on they will pair automatically. No.2 speaker will pair automatically to the already connected No.1 speaker. You can use the controls on either speaker as if they were the same speaker.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generatesuses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment doescause harmful interference to radio or television reception, which can be determined by turningthe equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver isconnected. Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept anyinterference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Name: USE: USE:
Speakers:
Protection rating:
battery:
Charge: time
Standby time:
Working time:
Bluetooth:
Bluetooth range:
microphone sensit Bluetooth range: microphone sensitivity: Standby current: Working current: Charging voltage: Charging current: Working frequency: distortion: FUSION.
Loudspeaker specifically for outdoor spaces 2x φ40 4Ω 5W100-18000Hz + Passive bass IPX7 waterproof 3.7V 2600mAH lithium 3Hrs

3Hrs
2000Hrs
8Hrs (70% volume)
4.1 (TWS dual pairing)
10M (open space)
-42(+-)3dB:omni-directional; S.N.R ≤60dB
≤200µA
≤100mA (minimum volume)
DC 5V
1A
2.4-2. 480 GHZ
≤3%





**RoHS** 2011/65/EU



## **ACCESSORIES**









wall mount



attach to fabric loop on the back of the speaker (1)




slide nipple in to universal socket (2)



wall mount slide nipple in to universal socket (2)

### **CHARGE**

Charging:
Once your speaker prompts "battery low", it's time to charge. Open the rubber micro-USB cover and connect the supplied micro USB cable ® to a USB power source. Once fully charged red light © will go out. If you want to play music whilst charging, connect to your device fist then start charging.

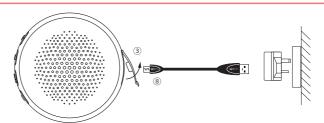

\*WARNING after charging make sure rubber cover is firmly closed to allow no water or debris to enter. Failure to do this will void your Warranty.

General guidelines:
Keep away from high temperature or prolonged exposure to direct sunlight.
Avoid constant contact with liquids.
Do not disassemble.
Do not drop repeatedly or excessively.
Keep out of reach of children.

Warranty:
Your BOOMPODS product is guaranteed against any defects in material or workmanship for one full year from the date of original purchase providing it has not been disassembled and it has not suffered accidental damage such as a hard knocks or long immersion in water, etc. The device must be used in accordance with the user manual. The warranty is subject to presentation of the original invoice or receipt from the retailer and does not apply to normal wear and tear or to any device that has been misused or tampered with. It should be returned to the local service centre, the service centre will not bear any shipping cost of the returned item.

Please check www.boompods.com for your local service centre.

# TURN UP THE BOOM!



**BOOM**PODS is a trademark of **BOOM**PODS LTD., Registered in England No 08147066. Boompods Ltd Unit 34, 67-68 Hatton Garden, London EC1N 8JY United Kingdom

BOOMPODS @2017 All Rights. This product uses BOOMPODS technology and is covered by international patents, FUSION-IP:2014305498847 Made in China.